



Gaylords Tech Department is constantly making the best better, here are some common hardware renderings which might be slightly different upon arrival. For ANY installation questions please email us Customerservice@gaylordslids.com

please visit us on the web for any additional Info @ WWW.GAYLORDSLIDS.COM

Gaylord's would like to thank you for your custom lid purchase. We greatly appreciate the sale and strive to produce top quality custom bed covers for your custom classic!

54-87 Chevy Stepside Drill-In Kit


PART# 11001SNNCN-




Custom Hinge
(2 Pieces)



(2) Saddle's

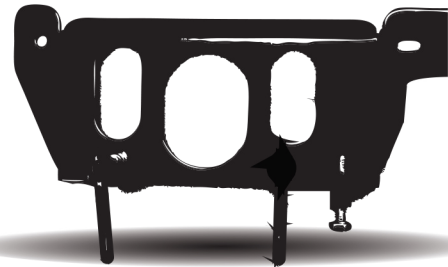


Dual Locks and Keys (2)

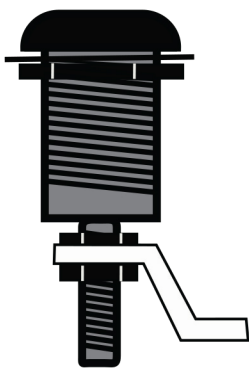

(2) 20" 80 lbs Shock



(2)
Striker Bracket

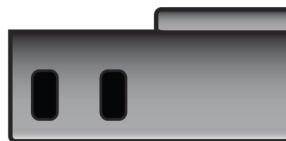

(2) Threaded Shock Balls
(2) Hex Nuts



Page 1

WARNING: If you are not familiar with the use of hand tools or are not accustomed to working on motor vehicles, have a dealer or accessory shop install the Kustom Lid. Carefully read all the instructions prior to attempting to fit the Lid. Before fitting the Lid, part the vehicle on level ground in a well lit area and apply the emergency brake. After installation, check that the Lid works correctly and securely locks shut. Periodically check all fasteners for tightness. Retighten only the loose fasteners. When using power or hand tools, always wear the correct protective clothing recommended by the tool manufacturer.

Installation Instructions 54-87 CHEVY STEPSIDE

Visit our Site for any Additional Info @ WWW.GAYLORDSLIDS.COM



**** BEFORE INSTALLATION PLEASE TAPE UP THE BED ****



Mounting The Hinges To The Bed.


- Set the hinge plate up against the bed side. Measuring back from the bulkhead 4.5" you will mark two holes to be drilled. The highest point of the hinge bracket should be 1/8" from the top of the bed rail.
- Drill the 3/8ths holes and insert the stainless bolts and nuts, nut on the inside.



Hooking The Lid


- (You can jump down to installing the shock mount while the lid is not installed to save some time)
- Set the hinge onto the hinge plate, and lightly tighten it.
- One person will need to climb into the bed with the drill, once the lid is "squared" up to your likings you can hold down the front of the lid while the person inside attaches the hinge to the bottom of the lid.

Shock Mounts Into 5th hole from rear

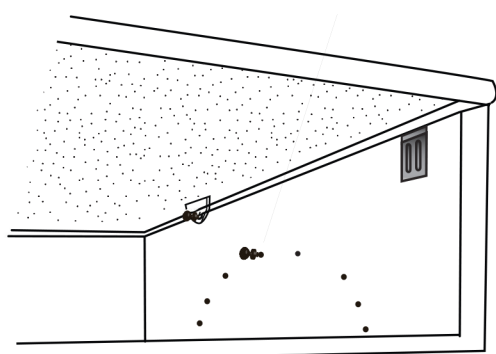

Shock Mounts

- Measure back about 13" from the shock mount on the lid and use the fender bolt closest to this measurement. Should be the 5th bolt counting up from the rear. Please contact us if you do not have these. Rare yet possible.
- You may now hook the shocks up, the thicker end of the shock with the label will be at the top.

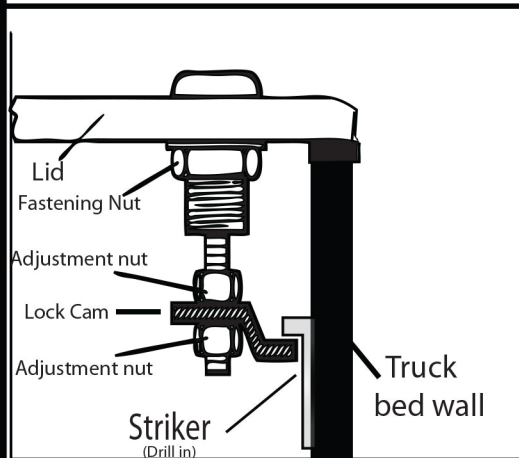

Drilling Striker Bracket Into Bedside

- Once the lid is installed properly you must now install the strikers. Assemble the lock as shown. The striker is designed to be attached at the top of the bed through the steak pocket, consealing the screws from the outside.
- Your finished! Enjoy your beautiful new Gaylord's lid and please periodically check the hardware to ensure everything stays tight.