




Gaylords Tech Department is constantly making the best better, here are some common hardware renderings which might be slightly different upon arrival. For ANY installation questions please email us Customerservice@gaylordslids.com

please visit us on the web for any additional Info @ WWW.GAYLORDSLIDS.COM

Gaylord's would like to thank you for your custom lid purchase. We greatly appreciate the sale and strive to produce top quality custom bed covers for your custom classic!


Custom Hinge System
(2 Pieces)

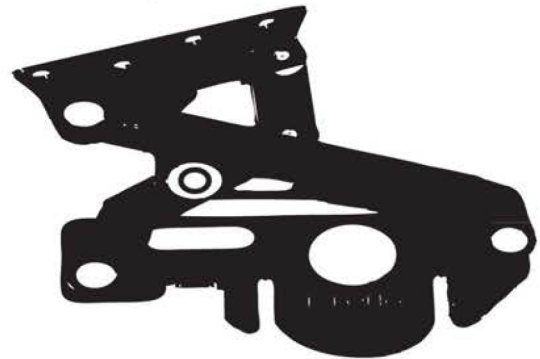

(2) Saddle's



(2) 27" 80 lbs Shock

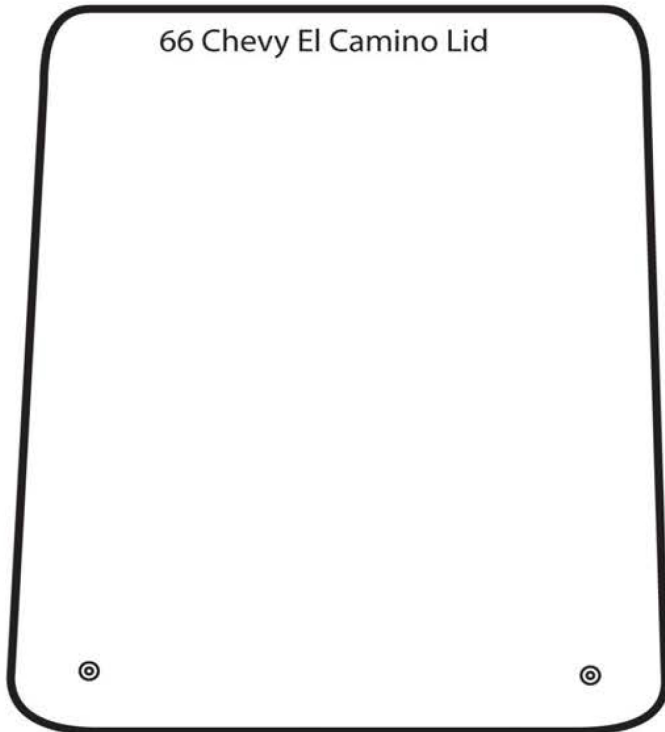

66 Chevy El Camino Lid


Dual Locks and Keys (2)



Striker Bracket



Front Alignment Tab

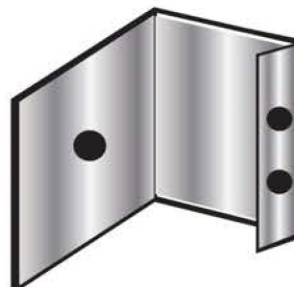

(2) Shock Mount's



WARNING: If you are not familiar with the use of hand tools or are not accustomed to working on motor vehicles, have a dealer or accessory shop install the Kustom Lid. Carefully read all the instructions prior to attempting to fit the Lid. Before fitting the Lid, part the vehicle on level ground in a well lit area and apply the emergency brake. After installation, check that the Lid works correctly and securely locks shut. Periodically check all fasteners for tightness. Retighten only the loose fasteners. When using power or hand tools, always wear the correct protective clothing recommended by the tool manufacturer.




64-66 El Camino Installation Instructions.

Visit our Site for any Additional Info @ WWW.GAYLORDSLIDS.COM



Before Install Please Tape Up Bed For Protection

We suggest taping up the bed to protect it from scratches during the installation. Around the front and around all the chrome trim. Just to be on the safe side.

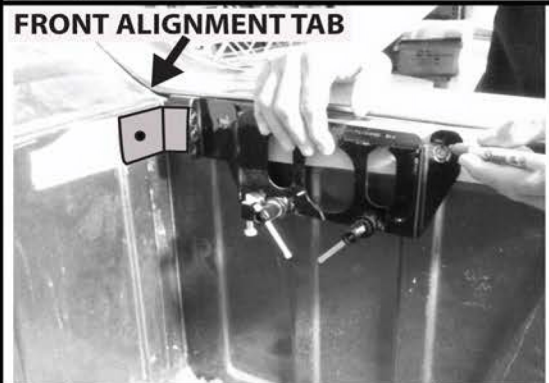

Installing Front Saddle System

Using the "Front Alignment Tab" mount the "saddle" to the bed side with the top of the saddle just below the trim. With the front alignment tab installed to the hinge it will decide the location for you, just be sure its just below the trim! use the provided sheet metals screws, or if you would like to use your own thats fine.

Placing and Mounting Hinge To The Saddle

Place hinge onto saddle and spin the thumb knobs to tighten it down. You will be drilling this hinge into the bottom of the cover once all adjustments have been completed.




Set Lid Onto Truck Bed

Set the lid onto the bed and square it up. Refer to next step.



64-66 El Camino Installation Instructions.

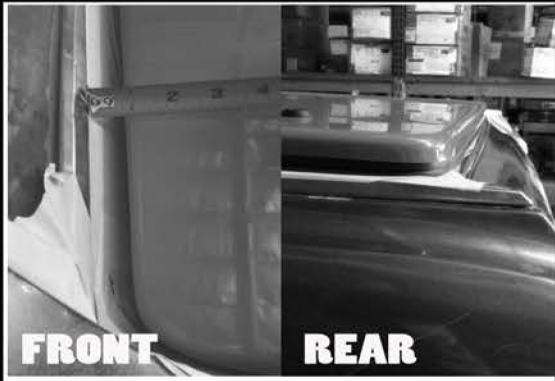

FRONT

REAR


Ensuring Cover Is Fitted Properly

The front of the lid should be placed around 7/8ths of an inch from the front of the bed and line up perfectly with the tailgate chrome piece at the rear. Nice and flush. You should do this with someone inside the bed ready to mark the lid where to drill or carefully lift it enough for someone to slip inside.



Setting The Lid On, Drilling Hinge Into Lid


Using the provided screws and washers, attach two screws on each side, crawl out and verify the alignment is where you want it to be and return to insert the last 2 screws on each side.

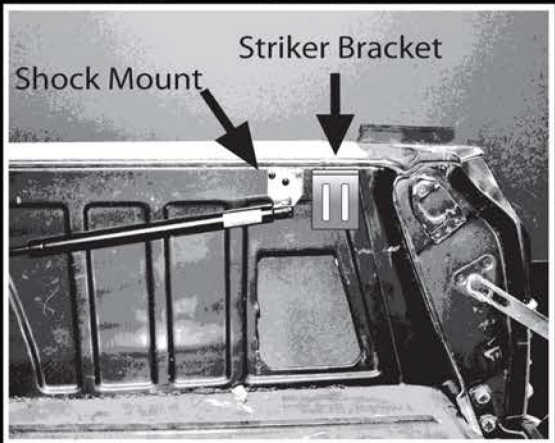

Shock Mount and Striker Bracket install

Measuring back 18" from the shock mount on the lid, mount the shock mount to the bedside. Just below the trim. The shock mount should be about 5.5" from the tail gate!

Once the lid has been properly fitted and installed you must now install the striker bracket (stainless piece lock grabs onto). Assemble the lock as shown BELOW and use it to determine a good spot for the striker. The lock will allow for some play, giving you options for the best functioning and looking position to mount the striker.

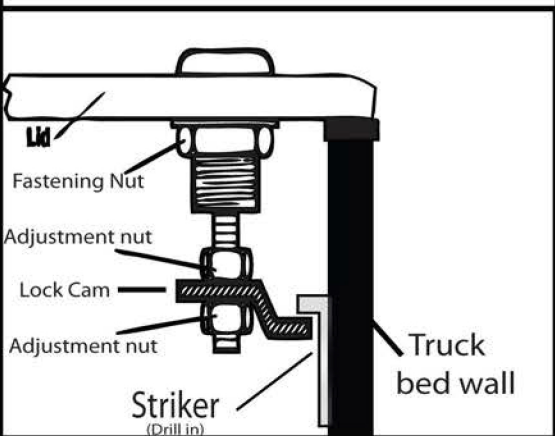

Adjusting The Lock

The lock adjustment is very simple, once the striker tabs are installed, slide the cam onto the lock shaft and adjust it using the adjustment nuts. Please work with the previous step in conjunction.

AND YOUR DONE! ENJOY YOUR GAYLORDS KUSTOM BED COVER!