



Gaylord's Tech Department is constantly making the best better, here are some common hardware renderings which might be slightly different upon arrival. For ANY installation questions please email us Customerservice@gaylordslids.com

Please visit us on the web for any additional Info @ WWW.GAYLORDSLIDS.COM

Gaylord's would like to thank you for your custom lid purchase. We greatly appreciate your business and strive to produce top quality custom bed covers for your custom truck!

61024 and 61025- 04+ Toyota Tacoma


(2) Shock Mounts w/ ball studs



(2) Gas Shocks



(2) Saddle's

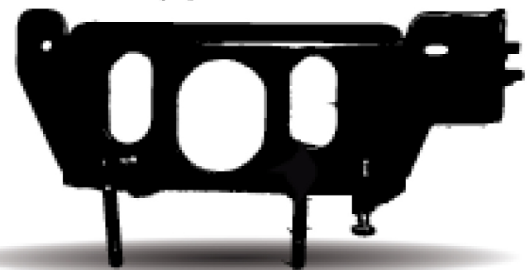

(2) Strikers



(2) Custom Hinges



Dual Locks and Keys (2)



(8) Large Utility Track Aluminum Sliders
(4) Small for shock mounts!



PAGE 1

WARNING: If you are not familiar with the use of hand tools or are not accustomed to working on motor vehicles, have a dealer or accessory shop install the Kustom Lid. Carefully read all the instructions prior to attempting to fit the Lid. Before fitting the Lid, park the vehicle on level ground in a well lit area and apply the emergency brake. After installation, check that the Lid works correctly and securely locks shut. Periodically check all fasteners for tightness. Retighten only the loose fasteners. When using power or hand tools, always wear the correct protective clothing recommended by the tool manufacturer.

"OG" Series Universal Installation Instructions

Visit our Site for any Additional Info @ WWW.GAYLORDSLIDS.COM




Gaylord's Kustom Lid's are mold formed and have very little variances, if you your cover is not fitting properly please call in or send photos to Info@Gaylordslids.com and we will reply the same or next business day if after hours.

**** BEFORE INSTALLATION PLEASE TAPE UP THE BED TO PREVENT DAMAGE****

Saddle 4.5" From Front

4.5"

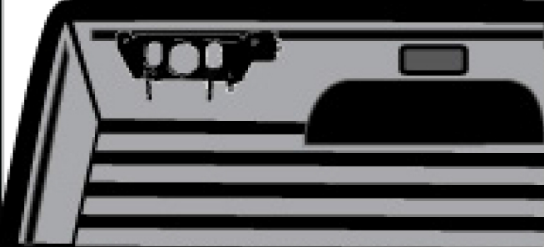

Placing Saddles Onto Truck Bed

- Using the small aluminum spacers and allen bolts provided, mount the saddle to the front of the utility track. The forward most part of the saddle will be about 4.5" from the front of the inside of the bed.
- Once the saddle is mounted you can set the hinge on. Finger tighten the thumb knobs. (you will need to adjust the height of the hinge when drilling them into the cover.)

Drilling Hinges Into Bottom of Cover

- You can now set the cover on and square it up. The person installing the cover must be in the bed with tailgate shut. We suggest looking down the sides while squaring it up to ensure that it is on straight.
- Once its square, push down on the cover while the installer drills the hinge into the bottom of the lid. There are metal plates pre fabbed into the lid to ensure the self tappers get a good bite.



Mounting Shocks

- Measuring back towards the tail gate, from the shock mount pre installed on the lid, you will place the shock mount on the rail **18" back for 27" shocks** or **13" for 20" shocks**. Use two SMALL aluminums provided for each mount.
- Open the lid and hook up the shocks. Notice one side of the shock is thicker then the other, the thick end will be "UP".



Adjusting Locks

- With the lid shut and tailgate down, install the cam in-between the two lock nuts. (cam is the piece that swings over and goes under the striker)
- Insert the key into the lock and turn it back in forth to determine the best mounting position of the cam. (The lock pulls up when locked)



PAGE 2